How to reset Password of AT series DVR/NVR

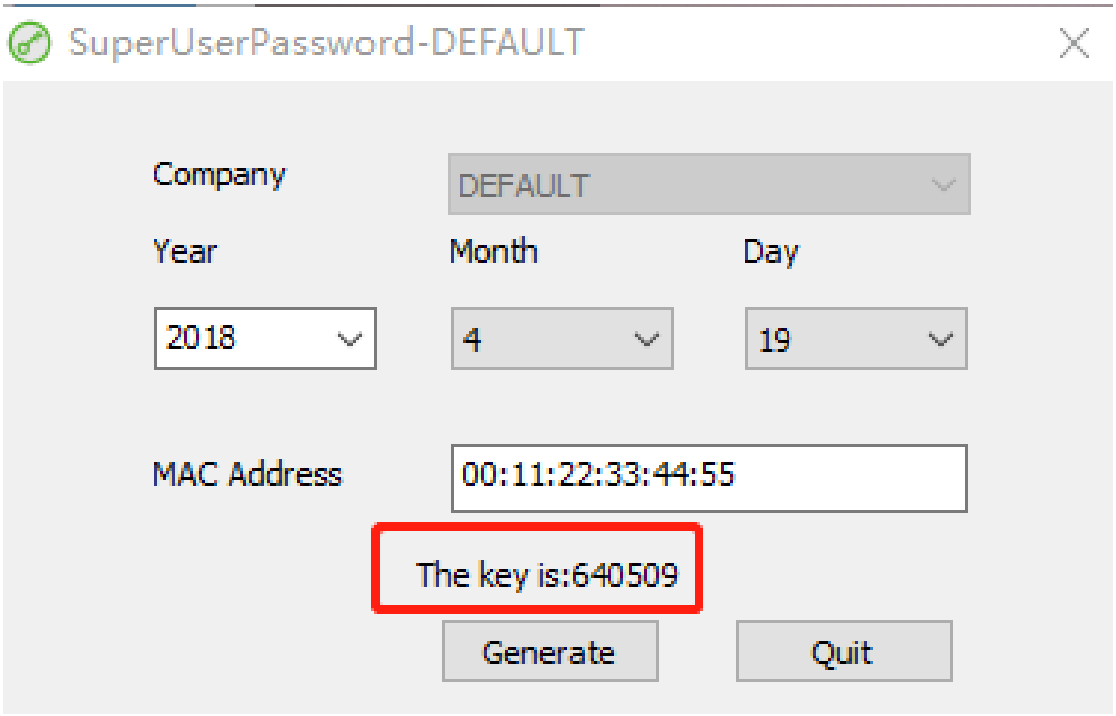

1. Please select date same on target DVR/NVR you want to "Super User Password".
2. Please type MAC Address of target DVR/NVR including number and special symbols.
   For example, if your MAC Address is "00:11:22:33:44:55", you must type as "**00:11:22:33:44:55**" including ":" without any spaces between.
3. Then, after clicking "Generate" button, you can get SUPER User Password to log into your DVR/NVR.
4. Please change to new Password after log in.